


# FITTING INSTRUCTIONS

1. Install the steel wire into the retaining clips on the reverse side of wheel rim. Ensuring the adjustable part is positioned between two plastic clips.

See Fig 1.

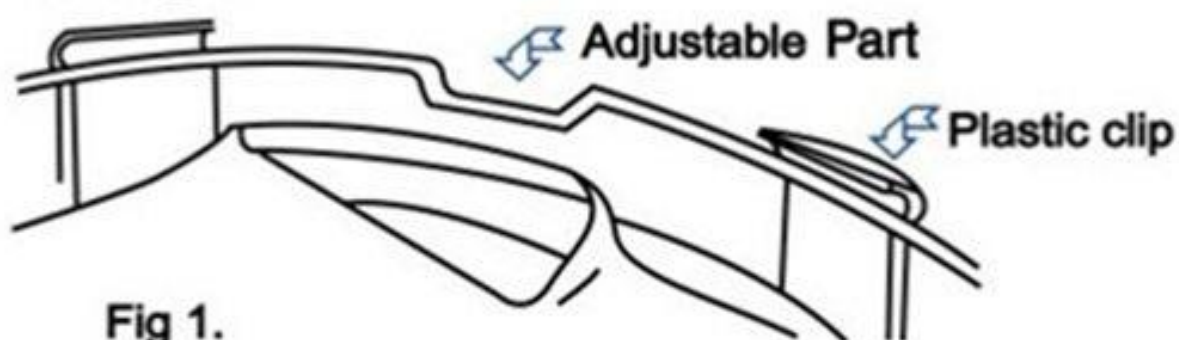

## INSTRUCTION FOR ADJUSTABLE RETENTION RING

*Fitment of split ring  
for fractional fitting  
View from inside the rim*

